



OWNER'S MANUAL 2012 YETI SB95

YETI CYCLES
600 Corporate Circle, Unit D
Golden, CO 80401
888.576.9384

www.yeticycles.com

YETI
CYCLES

TABLE OF CONTENTS

BRAND OVERVIEW	06
FRAME FEATURES	08
GEOMETRY	10
MAINTENANCE SCHEDULE	12
<i>SETUP</i>	
OVERVIEW	14
SHOCK SETUP	15
QUICK START GUIDE	16
CABLE/LINE SETUP	18
<i>TECHNICAL</i>	
ASSEMBLY OVERVIEW	20
CHIP SYSTEM	26
EXPLODED VIEWS	28
REBUILD KITS	30
<i>LEGAL</i>	
WARRANTY	32
CONTACT INFORMATION	33

WELCOME TO THE TRIBE. CONGRATULATIONS ON YOUR PURCHASE OF A NEW YETI.

We are confident your new bicycle will exceed your expectations for value, performance, and ride quality. Each frameset and component has been custom specified and designed to enhance your riding experience. Whether you are a beginner cyclist, or a seasoned pro, your Yeti bicycle will provide endless hours of two-wheeled fun.

This model specific manual is designed to be used in conjunction with the general Yeti Owner's Manual and the manuals supplied by the suspension manufactures. If you did not receive the Yeti owner's manual or the manual provided by the suspension manufacturer download the materials off the Internet, or contact your local dealer.

Bicycling can be a hazardous activity even under the best of circumstances. Proper maintenance of your bicycle is your responsibility and when done properly helps reduce the risk of injury and damage to your bicycle.

Warning: Make sure you review and understand the warnings, instructions, and content of this manual and accompanying manuals for your bicycle.

Warning: Technological advances have made bicycles and bicycle components more complex and the pace of innovation is increasing. It is impossible for this manual or the accompanying manuals to provide all the information required to properly repair and/or maintain your bicycle. In order to help minimize the chances of an injury, it is critical for you to have work performed by an authorized Yeti retailer.

This manual outlines basic setup and maintenance recommendations of your new Yeti. Because it is impossible to anticipate every situation or condition that may occur during the assembly, setup, and maintenance of your bicycle, Yeti recommends that all service and repairs be performed by your local authorized Yeti Dealer.


This manual contains many "Warnings" and "Cautions" concerning the consequences of failure to maintain or inspect your bicycle. The word "Warning" indicates a potentially hazardous situation in which, if not avoided, could result in serious injury or death. The word "Caution" indicates a potentially hazardous situation in which, if not avoided may result in minor injuries or damage to your bicycle or a component of your bicycle. Be sure to read and understand all of the Warnings and Cautions listed in the manual.

A 29'R THAT EMBODIES THE SOUL OF A CLASSIC YETI TRAILBIKE. BUILT WITH OUR SWITCH TECHNOLOGY.

1. PATENT PENDING SUSPENSION SYSTEM
2. FULLY SEALED ECCENTRIC SYSTEM
3. OVERSIZED PIVOT PINS WITH ENDURO MAX BEARINGS
4. SPLINED BB SHELL ACCEPTS REMOVABLE ISCG 03/05 TABS
5. TAPERED INSET HEADTUBE (44MM/56MM)
6. REAR SHOCK BY FOX RACING SHOX
7. DROPOUTS 12MM X 142 THRU AXLE OR 135MM QR
8. CUSTOM CHAIN-SLAP GUARDS
9. CABLE STOPS FOR HEIGHT ADJUSTABLE SEATPOST
10. DIRECT MOUNT FRONT DERAILLEUR

1. The SB95 delivers 5 inches of travel with our new Switch Technology. Efficient pedaling performance while still smooth and continuous when the going gets rough.
2. Compact, stiff, and fully sealed, the eccentric assembly is the key component to Switch Technology and is virtually maintenance free.
3. Oversized pivot pins help create a stiff interface between the front and rear triangles of the frame. Enduro Max sealed bearings keep things moving freely at the pivots.
4. The splined BB shell can accept a removable ISCG 03' or 05' tab. The splined system is lighter than a conventional welded tab and allows for a myriad of chain-guide options.
5. Using our new inset headtube on the SB95 allows for a larger headtube with more welding area, increased stiffness, and lower overall ride height.
6. The SB95 uses a 2.0 inch stroke, 7.5 inch eye to eye shock, by Fox Racing Shox.
7. The Yeti chip system allows for an easy switch between a standard 135mm QR or the 142mm x 12mm Shimano thru-axle system.
8. Custom chain-slap guards on the seatstay and chainstay keep things quiet while riding and protect the frame.
9. Dedicated cable stops for a height adjustable seat post make routing the line clean and easy. Enhance your trail riding experience on the SB95 with a dropper post.
10. Mount a direct mount (E-type) front derailleur to the SB95 with ease.

GEOMETRY

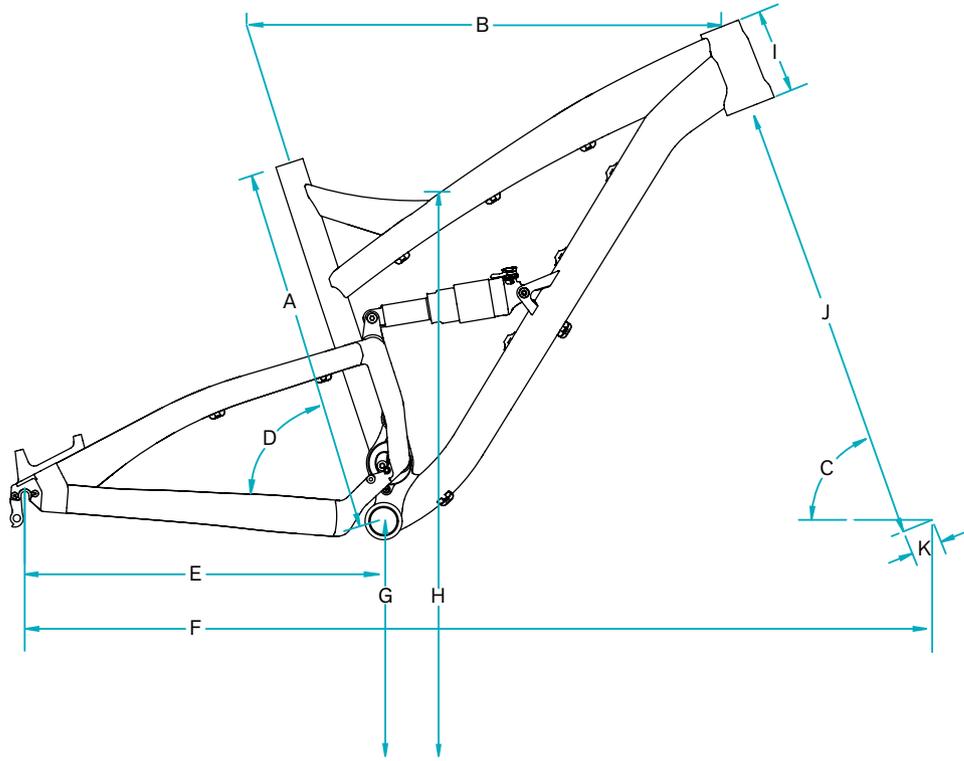

FIT

SMALL	5'3" (160 CM) - 5'7" (171 CM)
MEDIUM	5'7" (171 CM) - 5'11" (180 CM)
LARGE	5'11" (180 CM) - 6'3" (191 CM)
X-LARGE	6'3" (191 CM) - 6'6" (198 CM)

FOX 34 120 MM FORK

	SM	MD	LG	XL
A	16.5	18.0	19.5	21.0
B	22.1	23.1	24.1	24.9
C	68.5	68.5	68.5	68.5
D	72.0	72.0	72.0	72.0
E	17.5	17.5	17.5	17.5
F	43.9	44.9	46.0	46.8
G	13.2	13.2	13.2	13.2
H	28.2	28.8	29.0	29.8
I	3.7	4.1	4.9	5.5
J	21.0	21.0	21.0	21.0
K	2.0	2.0	2.0	2.0

FOX 34 140 MM FORK

	SM	MD	LG	XL
A	16.5	18.0	19.5	21.0
B	22.2	23.2	24.2	25.0
C	67.6	67.6	67.6	67.6
D	71.1	71.1	71.1	71.1
E	17.5	17.5	17.5	17.5
F	44.2	45.2	46.3	47.1
G	13.5	13.5	13.5	13.5
H	28.5	29.1	29.3	30.0
I	3.7	4.1	4.9	5.5
J	21.8	21.8	21.8	21.8
K	2.0	2.0	2.0	2.0

*All measurements are in inches

KEEP YOUR NEW YETI FRESH AND CLEAN

OVERVIEW

Following these guidelines will help maintain the performance of your bicycle and prevent more serious problems from arising. It is important to remember that service intervals can vary depending on climate, trail conditions and riding frequency. If you are unsure about working on your own bicycle, contact your authorized Yeti Dealer or visit the repair help section at www.parktool.com for more information on general bicycle maintenance.

SCHEDULE

	WEEKLY	MONTHLY	3 MONTHS	ANNUALLY
CLEAN AND LUBE CHAIN	■			
CHECK TIRE PRESSURE	■			
CLEAN BIKE OF MUD AND DEBRIS	■			
CHECK BRAKE FUNCTION	■			
CHECK SHOCK PRESSURE, IF APPLICABLE	■			
CHECK FOR LOOSE BOLTS AND TIGHTEN, IF NECESSARY	■			
CHECK HEADSET AND TIGHTEN / LOOSEN, IF NECESSARY		■		
THOROUGHLY CLEAN PIVOT POINTS WITH A RAG (DO NOT LUBRICATE)		■		
REPLACE BRAKE PADS, IF NECESSARY			■	
CHECK TIRES FOR WEAR			■	
CHECK SPOKE TENSION AND RETENTION, IF NECESSARY			■	
CHECK CHAIN FOR WEAR AND REPLACE IF NECESSARY			■	
COMPLETE TUNE-UP PERFORMED BY AN AUTHORIZED YETI DEALER				■

TORQUE

Yeti strongly recommends using a torque wrench when assembling your frame. Torque specifications for individual parts on the SB-95 are listed below, as well as in the step by step assembly instructions later in the manual. For general bicycle maintenance please consult the torque specifications of the manufacture's component you are adjusting.

KEY TORQUE SPECS

PART NUMBER	DESCRIPTION	TORQUE (IN/LB)
300030110	BOLT TI MALE M6X1X12MM	90-95
300030234	BOLT STOP M12X1.25X10MM	40-45
HNAS95A000000000000002	COLLET BOLT M8	155-160
HNAS95A000000000000004	UPPER LINK COLLET AXLE SB-95	35-40
HNAS95A000000000000000	MAIN PIVOT COLLET AXLE SB-95	35-40
HNAS95A000000000000006	AXLE CAP LOWER LINK	90-95

SHOCK SETUP

YETI TIPS

Inspect your shock for any visible damage. If oil is leaking or you notice any damage to the surfaces or seals, please contact the Fox Racing Shox service center for repair at 800.FOX.SHOX.

Shock set-up can fluctuate greatly based on the rider. The set-up guide is intended as a base line to get the rider started. Experiment with your settings to find the set-up that works best for you.



TOOLS NEEDED

- Shock Pump
- Tape Measure



01. AIR PRESSURE

The main air spring controls the sag of the shock. For the SB95 to ride properly it is important to setup the shock with the correct amount of sag. For general riding the SB95 works best with 25-30 % (13-15MM) of shock sag. To increase the sag reduce the main spring air pressure. To reduce the sag increase the main spring air pressure.



03. PRO PEDAL

The pro-pedal dampening has four levels of adjustment and is controlled by the blue lever and the numbered black dial. Use each setting to adjust the shock for different riding conditions and situations. For example, use propedal for riding to the top of the mountain and then switch to open for the descent. The four different levels of dampening on the shock are: (0) open, (1) light, (2) medium, and (3) firm pro-pedal. If the bike feels too firm, put it on a light setting, and if it feels too sluggish, turn it to the stiffer setting. We have found that the SB95 rides best (climbing and descending) with the pro-pedal in the open or light settings.



02. SAG

Once you have set your baseline air pressure you need to measure the sag. To measure the sag slide the travel indicator (O-Ring) up against the shock body. With a friend supporting the bike, sit on the saddle (do not bounce) and allow your body weight to compress the shock. Once you have compressed the shock, get off the bike and measure the distance between the shock body and the new position of the travel indicator (O-Ring). This is your sag.



SHOCK SETUP



04. REBOUND

The rebound adjustment has 12 clicks of adjustment. The rebound knob is the red adjustment dial located above your blue pro-pedal adjustment lever. As a general rule, adjustments that are too fast (counter-clockwise adjustment) will produce a springy ride with excessive kick-up of the rear end causing a bucking sensation. Adjustments that are too slow (clockwise adjustment) will cause packing of the rear wheel indicated by a sluggish ride feeling ride.

Slower rebound- turn the knob clockwise
Faster rebound- turn the knob counter-clockwise

QUICK START GUIDE - RP23

ADJUSTMENT	SETTING
AIR SPRING SETTING (PSI)	RIDER WEIGHT LESS 10 PSI
MEASURED SAG (MM)	13-15
REBOUND	*5 CLICKS
PRO-PEDAL LEVER	OPEN
PRO-PEDAL KNOB	POSITION 0

**All clicks are counted clockwise, rotating from the all the way out or counter - clockwise dial position.*

CABLE SETUP

YETI TIPS

The SB95 has full cable housing. By using full cable housing, we have eliminated break points in the line of your shifter housing. This allows riders to experience better overall shifting performance by reducing the entrance of unwanted elements such as sweat and sediment. Use of full cable housing helps prevent corrosion from the elements and keeps the shifting smoother for a longer period of time.

The staff at Yeti are sold on riding with a height adjustable seat post so we included specific cable guides for the post's line on the SB95. Run the line from your remote along the guides on the bottom of the top tube for a clean set-up. If you haven't tried a dropper on your SB95, we strongly recommend you do, as it makes trail riding even more fun.

Caution: The failure to properly route shifter housing can cause malfunction of the shift mechanism and unexpected shifting of gears.



01. REAR DERAILLEUR

Fit the housing from the rear shifter across the head tube and down the cable stops on the top of the down tube. There are two cable stop groups on the top of the down tube to which housing and brake line can be attached, each with two positions to secure housing. Use the position closest to the drive side of the frame for the rear derailleur housing and secure the line with zip-ties. Next route the housing internally through the drive side seatstay. Work the housing through the two holes in the drive side seatstay and loop into the rear derailleur to finish.



02. FRONT DERAILLEUR

Fit the housing from the front shifter across the head tube and onto the cable stops on the bottom of the down tube. Secure the housing to the three single cable stops on the bottom of the down tube with zip ties. Next, route the housing under the bottom bracket and into one of the two stops under the chainstay yoke. Use the stop closest to the drive side of the bike for Shimano front derailleurs and the stop in the middle of the yoke for Sram derailleurs. Ensure the housing loops into the chainstay stop to allow enough slack when the suspension is compressed. Run the wire cable through the housing and attach to the derailleur to finish.



03. REAR BRAKE

The rear brake line loops across the head tube and runs down the cable stops on the top of the down tube. Use zip ties to secure the line to the position closest to the non-drive side on the cable guides. Next, run the line between the non-drive side of the swingarm and the upper link and across the two single cable guides on the bottom of the non-drive seatstay. Secure the line to the guides with zip ties. Ensure the line is finished on the inside of the seatstay when attached to the caliper body. This will prevent the brake line from being compromised if the bike or rider falls.

ASSEMBLY

YETI TIPS

Make sure your tools are in good condition. A worn allen key can round the hex on a bolt not allowing for proper torque.

Torque settings are listed throughout the instructions. It is also important to prep all bolt threads. The instructions denote whether to use a blue Loctite compound or grease.

Warning: Service on Yeti bicycles requires special knowledge and tools. Yeti Cycles recommends that all service and repairs be performed by an authorized Yeti Dealer

TOOLS NEEDED

- Dead blow hammer
- 2.5mm allen key
- Two - 5mm allen keys
- Two - 6mm allen keys
- 10mm allen key
- Guide pin tool
- Lock ring pliers
- Grease
- Blue loctite



01.

Place the 60mm OD quad o-ring by the non-drive side main pivot bushing. The o-ring should be flush with the bushing.



02.

Lightly grease the 45mm integrated axle and insert it into the frame through the non-drive side main pivot bushing.



03.

Lightly grease the 40mm integrated axle and insert it through the drive side main pivot bearing. Ensure the main pivot pin axle hole is aligned with the axle hole on the non-drive side.



04.

Prepare a Ti male bolt with blue loctite and install into the threads on the drive side integrated axle with a 5mm allen key.

Torque to 90-95 in/lb.






05.

Fit the bearing retainer clips in the groove between the drive side integrated axle and the eccentric housing of the front triangle. Use a 2.5mm allen key to secure each clip with a M4x8mm flat head bolt prepped with blue loctite.

Torque to 15-20 in/lb.

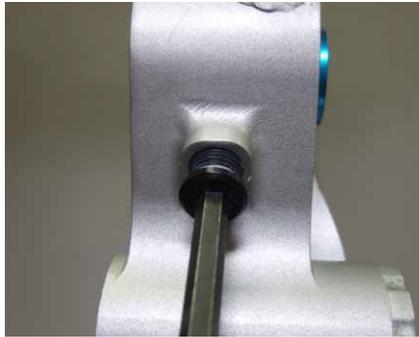

06.

Lightly grease the threads on the stop bolt and tighten into the eccentric housing with a 6mm allen key. Ensure the main pivot axle hole is turned to 3 o'clock during this step

Torque to 40-45 in/lb.



09.

Apply blue loctite to the threads on the lower link axle cap. Install and tighten the cap into the lower link axle with a 5mm and 6mm allen key.

Torque to 90-95 in/lb.



10.

Create two collet bolt assemblies. Place a collet wedge over each collet bolt and secure the wedge with a retaining ring using a pair of lock ring pliers. Prep the outside of each wedge and the bolt threads with grease.



07.

Slide the upper link over the lower pivot axle hole on the front triangle. Ensure the Yeti logo faces the front of the frame.



08.

Grease the lower link axle and install it through the link from the drive side of the frame. Use a dead blow hammer to tap the axle into place.



11.

Slide the rear triangle over the integrated axles and align it with the collet pin axle hole.



12.

Grease the shaft and threads of the main pivot collet axle. Insert the collet axle through the swingarm and integrated axles from the non drive side of the frame and tighten with a 10mm allen key.

Torque to 35-40 in/lb.





13.
Tighten a collet bolt assembly into the non drive side of the main pivot collet axle with a 5mm allen key.

Torque to 155-160 in/lb



14.
Press two 22mm Fox reducers into the the lower shock eyelet. Tap the reducers into place with a dead blow hammer if necessary.



17.
Grease the shaft and threads of the upper link collet axle. Insert the collet axle through the swingarm and the upper link bearings from the non drive side of the frame and tighten with a 10mm allen key.

Torque to 35-40 in/lb.



18.
Tighten a collet bolt assembly into the non drive side of the upper link collet axle with a 5mm allen key.

Torque to 155-160 in/lb.



15.
Install the shock onto the frame. Insert a 34mm Ti female bolt with washer through the drive side of the frame and shock. Use a Ti male bolt prepped with blue loctite on the non-drive side and tighten with two 5mm allen keys.



16.
Repeat the process for the shock and upper link interface. Use the fox guide pin tool and a dead blow hammer to help guide any female Ti bolts through the frame and frame components.

Torque both bolts to 90-95 in/lb.



CHIP SYSTEM



01.

Use a 2.5mm allen key to loosen the two M4x9mm flat head bolts holding the QR insert derailleur hanger in place. Remove the bolts and the QR insert from the frame. Repeat the process for the bolts and the non drive QR insert.



03.

Fit the 12MM non-drive insert into the groove on the inside of the non-drive side chainstay. The insert should be flush with the chainstay. Next, fit the non-drive 12mm cap through the chainstay and into the insert from the outside of the non-drive side chainstay. To finish, use a 2.5MM allen key to attach the two dropout pieces to the swingarm with two M4x10MM flat head bolts. Prep the bolts with loctite and insert them into the non-drive cap, through the swingarm and into the insert.



02.

Fit the 12MM insert hanger into the groove on the inside of the drive side chainstay. The hanger should be flush with the chainstay. Next, insert the 12mm drive cap through the chainstay and into the hanger from the outside of the drive side chainstay. To finish, use a 3MM allen key to attach the two dropout pieces to the swingarm with two M4x15MM cap bolts. Prep the bolts with loctite and insert them into the drive cap, through the swingarm and into the hanger.




04.

Insert the M4x6MM custom cap bolt into the top of the drive cap. This bolt will be used to set the position of the Shimano 142x12MM axle. Refer to Shimano specifications for exact instructions on proper axle operations.

Torque for all chip system bolts: 15-20 in/lb

EXPLODED VIEWS

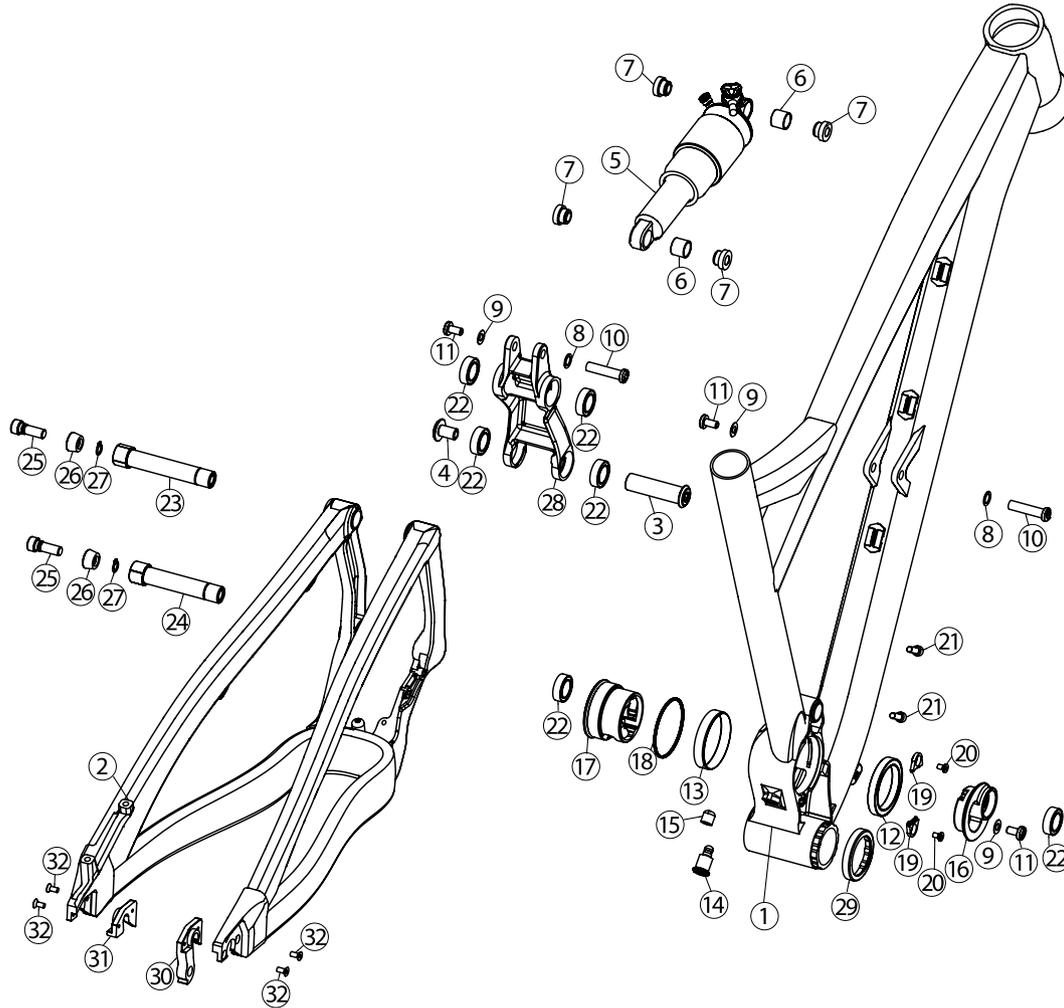

	PART #	DESCRIPTION	QTY
1	NA	FRONT TRIANGLE SB-95	1
2	NA	REAR TRIANGLE SB-95	1
3	HNAS95A00000000000005	LOWER LINK AXLE SB-95	1
4	HNAS95A00000000000006	AXLE CAP LOWER LINK	1
5	NA	FOX RP23 7.5X2.0	1
6	300020020	GARLOCK DP BUSHING .5"X.5"	2
7	300020034	REDUCER FOX 8X22MM	4
8	300030069	WASHER (8.5X12.5X0.5MM)	2
9	300030062	WASHER (6.5X12.5X0.5MM)	3
10	300030111	BOLT TI FEMALE 8X34MM	2
11	300030110	BOLT TI MALE M6X1X12MM	3
12	300020039	BEARING 6808 2RS MAX	1
13	HNAS95A00000000000007	BUSHING 52X50X9.5	1
14	300030234	BOLT STOP M12X1.25X10MM	1
15	HNA0000RBA00000CST0000	BUMPER STOP	1
16	HNAS95A00000000000008	AXLE 40MM SB-95	1
17	HNAS95A00000000000009	AXLE 45MM SB-95	1
18	300040430	O RING QUAD 56.8X60.4X1.6	1
19	HNAS95A00000000000010	BEARING RETAINER CLIP SB-95	2
20	300030134	BOLT-FLAT HEAD M4X0.7X8MM	2
21	300030010	BOLT-CAP H20 M5X0.8X16MM	2
22	300020041	BEARING 3802 2RS MAX	6
23	HNAS95A00000000000004	UPPER LINK COLLET AXLE SB-95	1
24	HNAS95A00000000000000	MAIN PIVOT COLLET AXLE SB-95	1
25	HNAS95A00000000000002	COLLET BOLT M8	2
26	HNAS95A00000000000001	COLLET WEDGE 15MM	2
27	HNAS95A00000000000003	RETAINING RING M8	2
28	HNAS95AABA000000000000	LINK UPPER SB-95	1
29	300040434	MOUNT BB	1
30	300060061	QR INSERT DER HANGER	1
31	300040386	QR INSERT NON-DRIVE	1
32	300030221	BOLT-FLAT HEAD M4X0.7X9MM	4

REBUILD KITS

PART #	DESCRIPTION	QTY
H12S95A0000000BRG0000	SB95 2012 BEARING REBUILD KIT	1
300020039	BEARING 40X52X7 6808 2RS MAX	1
300020041	BEARING 15X24X7 3802 2RS MAX	6
300040430	O RING QUAD 56.8X60.4X1.6	1
HNAS95A000000000000007	BUSHING 52X50X9.5	1
H12S95A0000000MST0000	SB95 2012 MASTER REBUILD KIT	1
300020039	BEARING 40X52X7 6808 2RS MAX	1
300020041	BEARING 15X24X7 3802 2RS MAX	6
300030062	WASHER (6.5X12.5X0.5MM)	3
300030069	WASHER (8.5X12.5X0.5MM)	2
300030110	BOLT TI MALE M6X1X12MM	3
300030111	BOLT TI FEMALE 8X34MM	2
300030134	BOLT-FLAT HEAD M4X0.7X8MM	2
300030234	BOLT STOP M12X1.25X10MM	1
HNA0000RBA0000CST0000	BUMPER STOP	1
300040430	O RING QUAD 56.8X60.4X1.6	1
HNAS95A000000000000000	MAIN PIVOT COLLET AXLE SB-95	1
HNAS95A000000000000001	COLLET WEDGE 15MM	2
HNAS95A000000000000002	COLLET BOLT M8	2
HNAS95A000000000000003	RETAINING RING M8	2
HNAS95A000000000000004	UPPER LINK COLLET AXLE SB-95	1
HNAS95A000000000000005	LOWER LINK AXLE SB-95	1
HNAS95A000000000000006	AXLE CAP LOWER LINK	1

HNAS95A000000000000007	BUSHING 52X50X9.5	1
HNAS95A000000000000010	BEARING RETAINER CLIP SB-95	2
H12S95A0000000ECC0000	SB95 2012 ECCENTRIC KIT	1
300030062	WASHER (6.5X12.5X0.5MM)	1
300030110	BOLT TI MALE M6X1X12MM	1
300030134	BOLT-FLAT HEAD M4X0.7X8MM	2
300040430	O RING QUAD 56.8X60.4X1.6	1
HNAS95A000000000000008	AXLE 40MM SB-95	1
HNAS95A000000000000009	AXLE 45MM SB-95	1
HNAS95A000000000000010	BEARING RETAINER CLIP SB-95	2

WARRANTY

YETI LIMITED (1) ONE YEAR FRAME WARRANTY

(applies to 303 WC / 4X / DJ)

Yeti Cycles will repair or replace, at its option, any frame it determines to be defective due to defective materials and/or workmanship. The (1) one year limited warranty is conditioned upon the bicycle being ridden under normal conditions and having been properly maintained. This warranty does not apply to the components attached to the frameset such as suspension components, wheels, drive train, brakes, seatpost, handlebar and stem. This warranty applies only to the original owner and is non-transferable. This warranty is void if the bicycle was not properly assembled by an authorized Yeti dealer.

YETI LIMITED (2) TWO YEAR FRAME WARRANTY

(applies to AS-R 5C / AS-R 5A / AS-R Carbon / SB66-A / SB66-C / SB95 / 575 / ARC / Big Top 29'R)

Yeti Cycles will repair or replace, at its option, any frame it determines to be defective due to defective materials and/or workmanship. The (2) two year limited warranty is conditioned upon the bicycle being ridden under normal conditions and having been properly maintained. This warranty does not apply to the components attached to the frameset such as suspension components, wheels, drive train, brakes, seatpost, handlebar and stem. This warranty applies only to the original owner and is non-transferable. This warranty is void if the bicycle was not properly assembled by an authorized Yeti dealer.

ADDITIONAL CONDITIONS

These limited warranties do not apply to normal wear and tear, nor to claimed defects, malfunctions or failures that result from abuse, neglect, improper assembly, improper maintenance, alteration, collision, crash or misuse. The original owner shall pay all labor charges connected with the repair or removal of all components. Under no circumstance does this limited warranty include the cost of travel or shipment to and from an authorized Yeti dealer. In order to exercise your rights under these limited warranties, the bicycle or frameset must be presented to an authorized Yeti dealer, together with proof of purchase.

**The above warranties have been in effect since January 2012. For warranty information on Yeti frames sold prior to that date please consult your local authorized dealer.*

NO FAULT REPLACEMENT POLICY

Yeti Cycles will make replacement parts available at a minimum charge to the original owner in the event of a crash or any other non-warranty situation. Yeti Cycles does this at its sole discretion and reserves the right to refuse this offer.

PRODUCT LIFE CYCLE

Every YETI frameset has a useful product life cycle. The length of that useful product life cycle will vary depending on the construction and the materials of the frameset, maintenance and care the frameset receives, and the amount and type of use the frameset is subjected to over its life. YETI recommends that an authorized YETI dealer should inspect the frame for stress annually. Frame stress could cause potential failure and the signs are usually apparent in the form of cracks, fracture lines, deformation, dents, and any other visual indicators of abnormality. These safety checks for frame stress are important to prevent accidents, injury to the cyclist, and product failure of a YETI frameset.

DISCLAIMER

YETI Cycles is not responsible for any damages to you or others arising from riding, transporting or other use of your bicycle. In the event that your frame breaks or malfunctions, YETI Cycles shall have no liability or obligation beyond the repair or replacement of your frame pursuant to the terms outlined in the warranty.

**If you have a warranty concern, please contact your authorized Yeti dealer.*

YETI CYCLES

600 Corporate Circle, Unit D
Golden, CO 80401
(p) 303-278-6909
(f) 303-278-6906
www.yeticycles.com

BUSINESS HOURS

Monday-Friday
8AM-11:30AM, 1:00PM-5:30PM
(Mountain Time)